

Thank you for buying 'Glance 310 - round wall mirror'

## Instructions.

The Mirror is supplied with a screw and wall plug suitable for a stone or brick wall. For other wall types (eg. hollow plasterboard) alternative fixings will be required. If in doubt, consult a qualified professional.

You will need a power drill, a masonry drill bit, a medium cross-head screwdriver to install this product.


Ensure the wall surface is flat and of suitable strength and construction before securing the Mirror.

### Fixings:

(A) - wall screw x1



(B) - wall plug x1

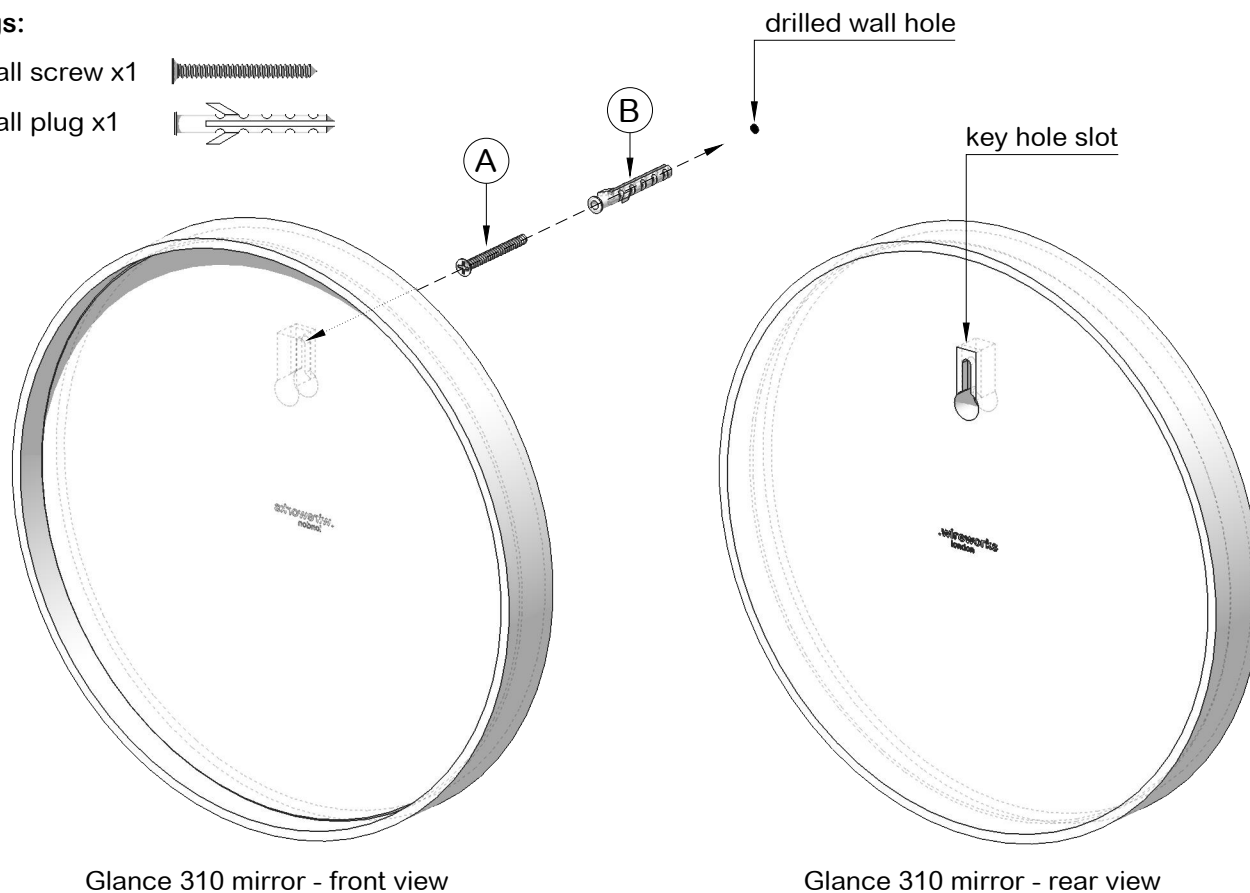

Please follow steps 1-5.

1. Mark the position for the wall plug.
2. Drill hole in the wall to accommodate the wall plug. Push in wall plug so it is flush with the wall.
3. Fix screw into the wall plug leaving the screw head protruding approximately 5-8mm.
4. Attach the Mirror to the screw head and secure in place. The Mirror should be held comfortably against the wall. It may be necessary to tighten or loosen the wall screw to get the correct fit.
5. If the Mirror does not go in place easily check the screw head is not tight to the wall, it needs to stick out slightly to engage the 'keyhole'. Before use check the Mirror is secured against the wall surface. Consult a qualified professional if the Mirror is loose or not secure.

### Warnings:

Fit in accordance with manufacturers instructions. Do not strike the glass with hard or pointed items. Wear suitable eye protection when drilling. When using power tools near water the use of a residual current device is advised for added protection against electric shock. Beware of hidden pipes or power cables in the wall. Take care when drilling on glazed tile surfaces in case the drill slips.