

Instructions


Rombe Shelf / Desk Industrial Facility 2025



Please read these instructions carefully and retain them for future reference to ensure the product is used correctly. For your own safety, please study each step of this instruction manual first. &Tradition is not responsible for any faults or damage caused by not following these instructions correctly. Do not modify this product in any way. If you have any questions or comments, please do not hesitate to contact us by mail on: info@andtradition.com

&Tradition®

Rombe Shelf / Desk Industrial Facility 2025

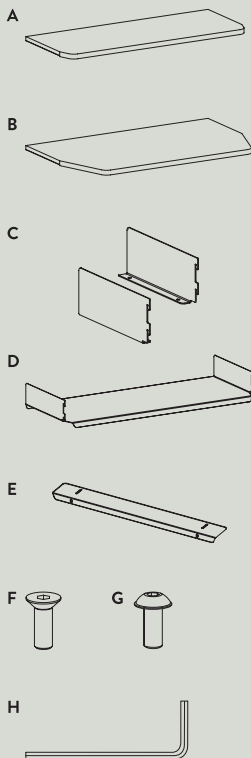

Safety precautions

- Please refer to the primary Rombe instruction manual for additional guidance.
- Keep the packaging out of reach of children.
- **WARNING!** Furniture tipping over can lead to serious or fatal crushing injuries. The product must be mounted to the wall using the mounts provided.
- Screws and plugs are not included to attach the wall mounts to the wall. Use suitable screws and plugs for your walls. Consult professional advice if in doubt.
- Ensure all components are securely attached.
- This product is intended for indoor use only.
- Do not put a TV on this product.
- Place heavier items on the lowest shelves.
- Maximum weight capacity is 15kg / 33lbs for the shelf or, desk.

Contents

- A Wooden shelf board*
- B Wooden desk board*
- C Metal brackets*
- D Metal shelf*
- E Wall bracket
- F Countersunk head screw* (M5 x 14mm)
- G Pan head screw* (M5 x 12mm)
- H Allen key (3.0mm)

***Delivered content depends on chosen configuration.**

Tools needed

- Screwdriver
- Cordless drill
- Spirit level
- Drill bits**
- Wall plugs**
- Wall screws**

****Select appropriate fixings for your wall type i.e. plaster, concrete, brick, or wood.**

Cleaning instructions

Lacquered wood

For daily care, it is recommended to dust the surface with a soft, dry cloth. Regular cleaning can be done using a soft cloth wrung in lukewarm water. Dry immediately afterwards with a soft, dry cloth following the wood grain. For more severe cleaning, use a soap specifically developed for lacquered wood.

Avoid abrasive cleaning detergents and aggressive cleaning agents as they may damage the surface of the wood. To prolong the look and lifespan of lacquered wood, avoid placing in direct sunlight, excessive heat or humidity.


Powder-coated aluminium and steel

For daily care, it is recommended to dust the surface with a soft, dry cloth. Powder-coated surfaces can also be cleaned with a soft cloth wrung in a mild solution of lukewarm water and a universal cleaning detergent. Avoid abrasive cleaning agents or aggressive cleaning detergents as this may permanently damage the surface. Always dry immediately afterwards with a clean, dry cloth.

Step 1 / 7

In case your configuration contains wooden shelves or a desk, assemble these components first.


Place the wooden boards (A or B) face down on a soft, flat surface. Attach the metal brackets (C) as illustrated using the countersunk head screws (F).

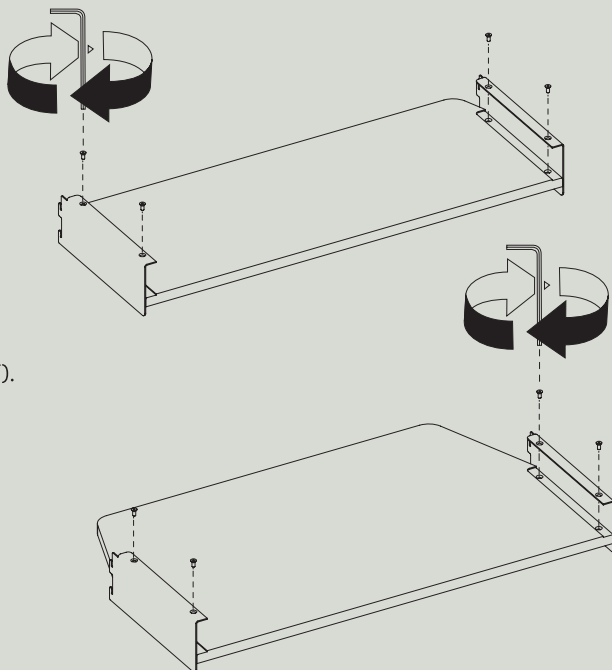

Step 2 / 7

Attach the assembled shelf or desk to the uprights. Slide in from the side and lower into position as shown in the illustration.


You can raise or lower the shelf or desk to your desired position by selecting the holes above or below.

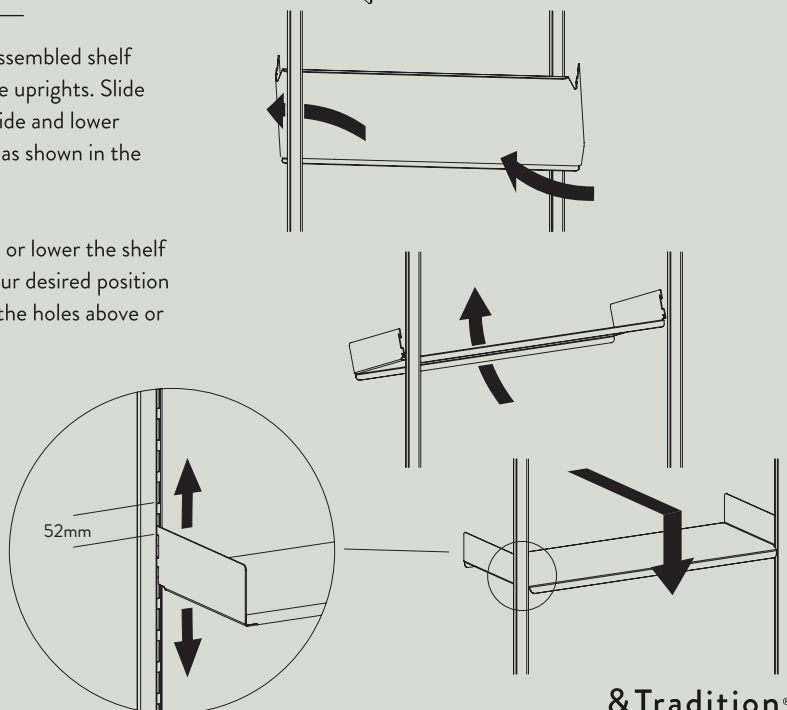

Step 3 / 7

IMPORTANT: If you plan to mount the shelf or desk on the lower third of the system, please be aware that at least one wall bracket needs to be installed for to security reasons.

If no wall bracket is mounted yet, follow the instructions further along.

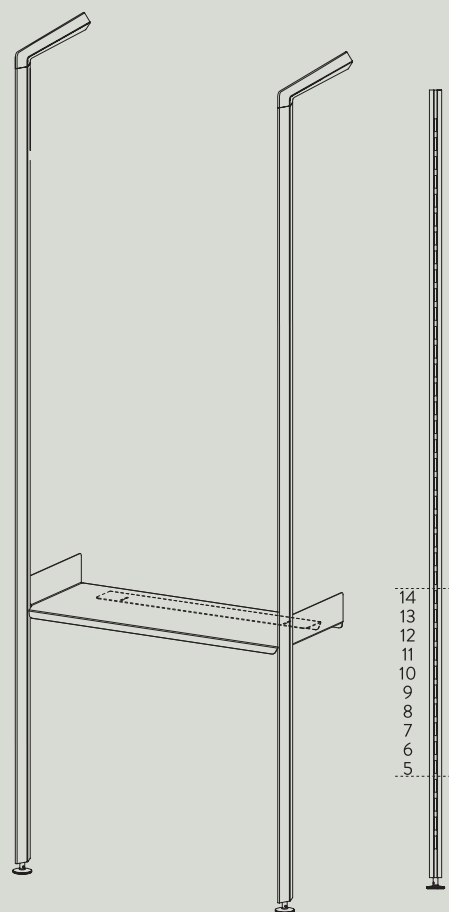


Step 4 / 7

IMPORTANT: Ensure the shelf or desk height meets your preferences before proceeding with the next step.


To add the wall bracket (E), use the attachment point underneath the shelf or desk using the pan head screws (G).

Do not fully tighten the screws just yet.

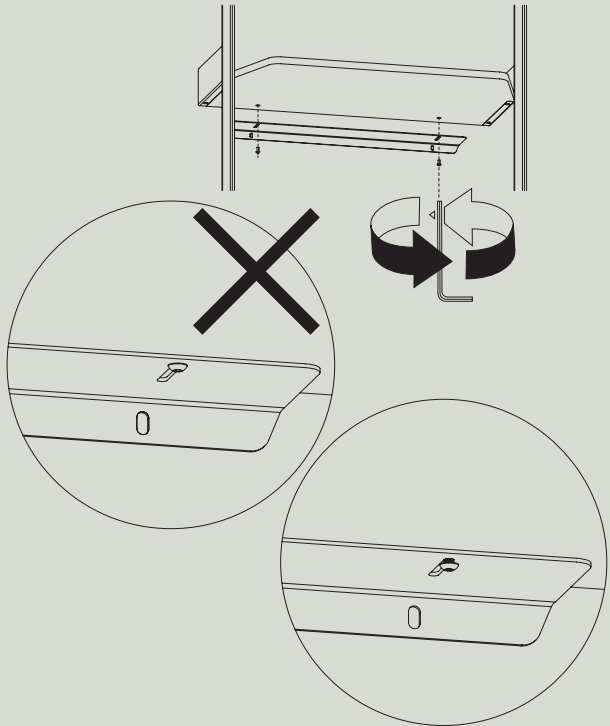

Step 5 / 7


Push the wall bracket all the way back to meet the wall behind the unit and up against the shelf or desk.

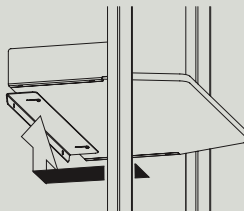

Step 6 / 7

Mark the position of the additional wall fixtures.

Remove the wall bracket and the shelf or desk to create enough space for installing the wall plugs.

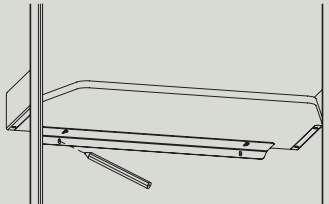

Step 7 / 7

Finally, fasten the connection of the wall bracket to the shelf or desk, and the wall.

For the wall connection, use a pan head screw with a diameter of at least 10 mm.

IMPORTANT: Make sure that you use plugs suitable for your wall type. If in doubt, consult a professional to ensure the shelving system is securely attached to the wall.

