


RIVET TYPECASE

Design by Jonas Trampedach

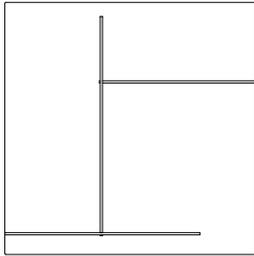

FRAMA

Rivet Typecase Assembly Guide

Contents:

In this box you will find:

- one shelf
- one wall plate
- 4 wall screws

Necessary Tools:


- Screwdriver
- Drill
- Leveling guide




Wall Screws




Level




Screwdriver

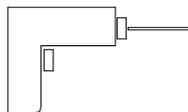


Drill

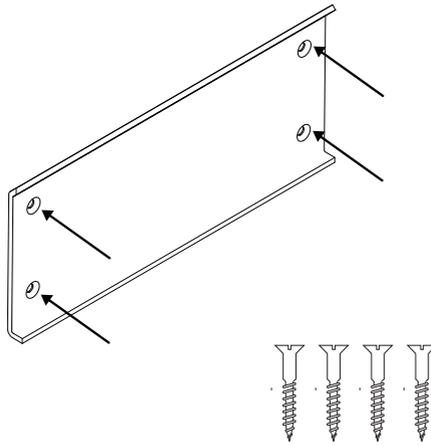


1.

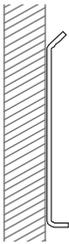

2.

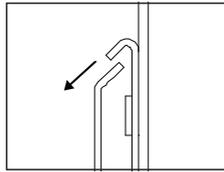

3.

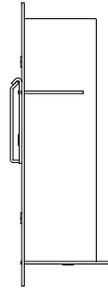

4.

1. Start by placing the wall plate on the wall.
Use the leveler to make sure the plate is mounted in a straight horizontal angle.
Fasten it with the four screws.
Make sure to use the right wall anchors proper for your wall.
2. Side view of a correct mounted wall plate.
3. Lower the shelf on the on the top list of the wallmounted plate.
4. Side view of a correct mounted shelf.

FRAMA